




## CLEAN BOILER TECHNICAL INFORMATION

### DIRECTIONS :

Mix AXI-THERM CLEAN BOILER with demineralized water provided by an Axiom PUROPAL demineralizer at a concentration of 10 to 20%. Lower concentrations do not yield satisfactory results. Higher concentrations have no adverse effects. For light to medium cleaning use a 10% concentration and circulate for 2 to 4 hours. For heavy cleaning requirements and best results, circulate a 20% mixture through the boiler for 6 to 8 hours.

To avoid the re-formation of deposits, clean the system with AXI-THERM CLEAN 5 OR 10 and refill the system with AXI-THERM PROTECT 1 inhibitor. Do not use in potable water systems. Do not ingest. Do not dispose of waste through the environment. Keep out of reach of children.

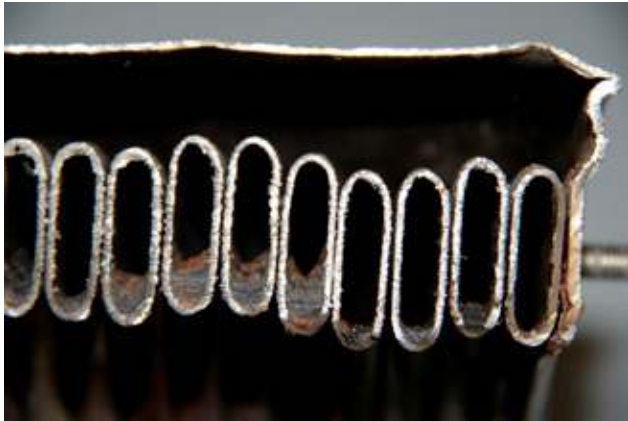

**BEFORE**



**AFTER**

SKU	Purpose	Bottle Size	Treatment Volume	Case Qty
<b>AXTH-BOILER-1L</b>	Boiler Water Side Cleaner	1L (33.8oz)	5 to 10 litres (1.32 to 2.64 gal)	10

### ACCESSORIES :

- AXTH- Water Test** -- Axi-Therm Boiler Water Quality Titration Test Kit
- PruoPal-1** -- Disposable Demineralizer Cartridge

Project \_\_\_\_\_  
 Consultant \_\_\_\_\_  
 Unit Tag \_\_\_\_\_

Location \_\_\_\_\_  
 Contractor \_\_\_\_\_  
 Sales Agent \_\_\_\_\_